



ENCHLOR Inc. Gas Feed Systems Series E2000 Instruction Manual



Direct cylinder or
manifold mounted with
rate valve (10 kg /h)



Direct cylinder or manifold
mounted with rate valve
(1- 2 - 5 kg /h)



Direct cylinder or manifold mounted with
remote mounted meter panel with rate valve



All ENCHLOR Chlorination systems are carefully designed and tested for years of safe, accurate field service. All ENCHLOR Chlorination systems are chlorine tested, at customer specified conditions, prior to shipment. All ENCHLOR products are made of the finest materials. To ensure best operation, read these instructions carefully and completely and store them where all maintenance personnel will have access to them.

Each 2000 Series gas chlorination system consists of the following:

1. The vacuum regulators which mount on the chlorine cylinders.
2. A wall mounted flow meter with manual control valve.
3. The ejector, with nozzle and diffuser, mounts directly to the pipe line, tank, wet well, or to a solution line.
4. Standard accessories:
 - a. Appropriate polyethylene tubing for vacuum lines.
 - b. Ten lead gaskets for each vacuum regulator.
5. Additional parts available from any plumbing supply, or can be ordered through Enchlor.
 - a. Pressure gauge.
 - b. Water shut off valve.
 - c. Y-type strainer.

Gas Chlorination Systems

Series 2000

Operation & Maintenance Manual

Table of Contents

I.	SAFETY INFORMATION	3
II.	DESIGN AND INSTALLATION NOTES.....	3
III.	SYSTEM INSTALLATION	4
	1. Installation of Enchlor Inc. Ejector.....	4
	2. Installation of Enchlor Inc. Vacuum Regulator	5
	3. Connecting Vacuum Lines.....	5
	4. Remote Meters.....	5
IV.	CHLORINATION SYSTEM VACUUM TEST	6
V.	START UP OF CHLORINATION.....	7
VI.	SHUT DOWN PROCEDURE	7
VII.	CHANGING CYLINDERS	7
VIII.	RATE VALVE OPERATION	8
IX.	TROUBLESHOOTING.....	8
	1. Pressurized Leaks.....	8
	2. No Chlorine Feed	9
APPENDIX: SERVICING THE ENCHLOR INC. SYSTEM		
A-1.	VACUUM REGULATOR	10
A-2.	INLET ASSEMBLY	10
A-3.	REMOTE METER	11
	1. Cleaning the Rate Valve	11
	2. Cleaning the Meter Tube	11
A-4.	EJECTOR/CHECK VALVE ASSEMBLY	12
	1. Loss of Vacuum at the Ejector	12
	2. Servicing the Ejector Check Valve Assembly	12
NOZZLE TABLES		13-16
DRAWINGS		
	1. Vacuum Regulator	17-21
	2. Ejectors	22-23
	3. SWICHOVER MODULE	24-25
	4. REMOTE METER	26-27
	Technical Data	28
	HOW TO CHOOSE LEAD GASKETS	29
	HOW TO CHANGE CHLORINE CYLINDER	30

SECTION I: SAFETY INFORMATION

TAKE CARE WITH CHLORINE!

1. Always keep chlorine cylinders in an upright position with the valve cap screwed on tight before moving full or empty cylinders. Cylinders should be moved with care.
2. A safety chain must be placed around the cylinder and secured to a wall. Spare full cylinders should also be secured carefully.
3. For best operation and safety, the vacuum regulator and cylinders should be protected from the elements including direct sunlight.
4. Never place heaters or heat lamps directly on a cylinder.
5. Ammonia gas should NOT be stored or fed in the same room with chlorine. Contact of the gases may result in an explosive mixture.

IMPORTANT NOTE:

Take extreme caution when using chlorine gas manifolds. Manifolds contain pressurized chlorine gas there- by increasing the risk of a pressurized chlorine leak. Enchlor vacuum regulators are designed to mount directly onto the valve of chlorine and sulfur dioxide cylinders. Direct cylinder mounting is the easiest and safest configuration to operate and maintain. With this configuration, the chlorine gas flows under vacuum everywhere beyond the one pressure point at the chlorine cylinder valve.

SECTION II: DESIGN AND INSTALLATION NOTES

1. The “all vacuum” system means that system will shut off at the cylinder valve, should the vacuum line be broken, if water is stopped for any reason, or if the chlorination equipment is physically damaged.
2. Choosing the right feed rate capacity:

VACUUM REGULATOR SHOULD BE ON MAXIMUM POSSIBLE FLOW.

Imperial Units:

$$\text{GPM} \times 0.012 \times (\text{PPM}) \text{ Dosage} = \text{PPD}$$

Gallons Per Minute Parts Per Million Pounds Per Day (Cl 2)

Example: $600 \text{ GPM} \times 0.012 \times 3 \text{ PPM} = 21.6 \text{ PPD}$

In this example a 50 PPD system would be appropriate.

Metric Units:

$$\text{LPM} \times 0.0599 \times (\text{PPM}) \text{ Dosage} = \text{GPH}$$


Liters Per Minute Parts Per Million Grams Per Hour (Cl 2)

3. TOTAL BACK PRESSURE is the pressure in the pipeline to be chlorinated plus the friction losses in the solution line between the ejector and the point of injection at the pipeline. Ejectors capable of operating with backpressures up to 140 Psig are standard. For higher backpressure consult factory.

4. It is preferable to locate the ejector at the point of solution injection in order to eliminate the need for solution lines. Friction losses in the solution line will increase the ejector backpressure. To reduce the friction losses, increase the solution line internal diameter and limit the number of flow restrictions and

turns. Also be sure that the solution line material is resistant to the highly concentrated chlorine mixture. Avoid solution lines wherever possible.

5. The chlorine gas is carried from the vacuum regulator to the ejector through the specified polyethylene tubing. Up to 25 feet of polyethylene tubing between vacuum regulator and ejector is standard. For longer distances consult factory.

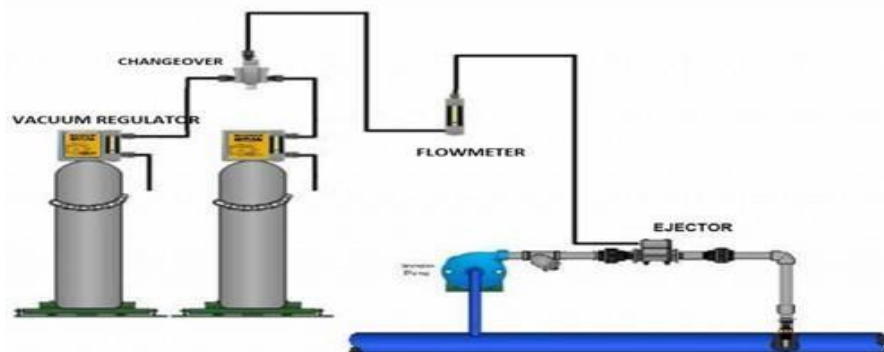

A typical installation injecting chlorine into a pipe line using city water.

SECTION III: SYSTEM INSTALLATION

(I) INSTALLATION OF EJECTOR (Refer to Figures 1 and 2)

1. Installation of EJECTOR:

- Remove the diffuser from the ejector assembly and place 2 wraps of Teflon tape on diffuser threads.
- Do Not install diffuser into pipeline when assembled with ejector.
- Turn diffuser by hand into NPT threads of pipeline (3/4" or 1 1/4" NPT). Place wrench on diffuser and tighten one half turn maximum.
- Reconnect diffuser to ejector making sure appropriate O-rings are on each side of nozzle and diffuser.

2. Testing of ejector. (Note: The vacuum regulator should still be in the shipping case.)

- Piping hook up to ejector (Refer to Figures 1 and 2 and Servicing Section in this Manual).
 - Ejector should be installed downstream at a sufficient distance so that chlorinated water is not re-circulated through the booster pump. (See Figure 2.)
 - On the water inlet side to the ejector nozzle the following should be installed: a gate valve, Y-strainer, and a pressure gauge.
- Testing for sufficient pump pressure to operate ejector. Also checking that booster pump (if applicable) operating in the proper direction. Refer to ejector performance charts and tables at end of this manual.

Note 1: Ejector must have some back pressure to prevent jetting. (Jetting causes loss of vacuum)

Note 2: When chlorinating into a contact chamber a tee should be installed on the solution line with a vacuum breaker to prevent siphoning.

- If operating with city water pressure (no booster pump), open the water inlet valve to the ejector and feel for suction (with your finger) at the fitting on the top of the ejector.
- If pump is operating in proper direction there should be a strong vacuum at the fitting on the top of the ejector. Feel for suction (with your finger) at the fitting on the top of the ejector.
- If the ejector has tested satisfactorily continue to the next step (Mounting the Vacuum Regulator).

(II) INSTALLATION OF VACUUM REGULATOR

NOTE: The chlorine cylinder valve is CLOSED. Do not open until instructed to do so.

1. See that safety chain is secured around chlorine cylinder.
2. Remove the cylinder protection cap from the chlorine cylinder.
3. Examine the vacuum regulator for obvious damage.
4. Remove masking tape used for shipping purposes.
5. Place lead gasket over vacuum regulator inlet assembly.
6. While placing lead gasket on vacuum regulator see that the filter has not fallen out of inlet assembly. (This filter is necessary to remove particles that will cause venting.) The filter should be inspected each time the cylinder is changed.
7. Mount vacuum regulator on cylinder valve being sure the yoke screw is backed out far enough for sufficient clearance. While tightening the yoke screw be certain that the lead gasket stays in place. Excessive tightening can damage gasket and/or yoke screw. DO NOT USE EXCESSIVE FORCE. See torque specifications below.

(III) CONNECTING VACUUM LINES BETWEEN VACUUM REGULATOR AND EJECTOR AND VACUUM

REGULATOR VENT TO OUTSIDE (Refer to Figures 1 and 2)

1. The side connector of vacuum regulator is for vacuum line tubing to ejector. (Allow enough vacuum tubing for changing cylinders.)
2. Connect vent tubing to second connector on the vacuum regulator and vent to safe area outside of building. (Place bug screen outside on end of vent tubing.)


NOTE: Do Not connect vent lines from two vacuum regulators to one common vent. You must run separate vent lines to the outside, when using multiple vacuum regulators.

(IV) REMOTE METERS (Refer to Figure 2)

1. Remote Meters: (Gas flow is from bottom to top through the tube)
 - a. Connect the line in to the bottom tube connector to vacuum regulator .

b. Connect the line out to the ejector to the top connector.

A Switchover System injecting chlorine into a pipeline using a turbine positive displacement pump. Pressure relief valve must discharge to a drain or outside of building. Note the by-pass piping from pump discharge through by-pass valve back to suction side of pump. NOTE: By-pass valve must never be completely closed. NOTE: Pump suction and ejector must be from the side of the pipeline, not from the top of the line.

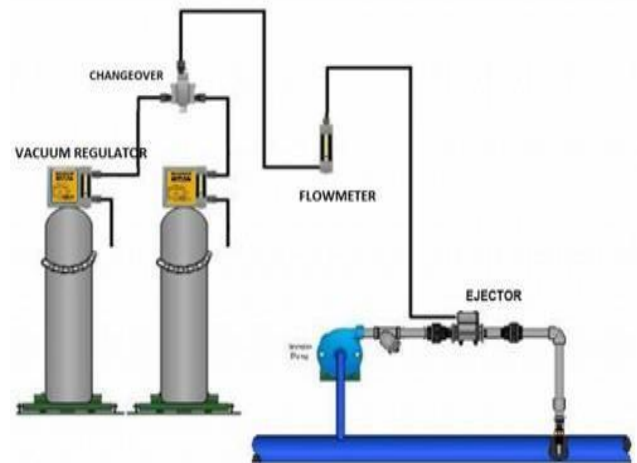

SECTION IV: CHLORINATION SYSTEM VACUUM TEST

1. Do Not open chlorine cylinder valve until vacuum test is satisfactorily completed.

a. Vacuum Test

With the chlorine cylinder still closed, start the ejector booster pump and the meter tube ball should drop to the bottom within about ten seconds. If the ball continues to bounce, there is either a leak at the lead gasket or a loose connection at the vacuum tube fittings or meter tube. (The tube fittings should be hand tight. It is not necessary to use pliers or a wrench on these fittings. If meter tube needs tightening, use a quarter and finger tighten inlet plug.) At this time the rate valve on the vacuum regulator should be open two or three turns.

b. If the ejector is operating properly (pulling sufficient vacuum) then the front bolts should be depressed on both vacuum regulators.

c. Turn off water supply to ejector.

d. Wait 5 to 10 minutes with water supply off. The ball should remain still at the bottom of the meter tube.

e. If the system is vacuum tight proceed to the next step.

f. Disconnect vacuum tubing at the vacuum regulator to allow air to enter the system. Reconnect tubing.

g. Place one of the vacuum regulators in standby by turning the front knob two turns counterclockwise and then returning it two turns clockwise. The front bolt should remain protruding per the diagram on the vacuum regulator.

SECTION V: START UP OF CHLORINATION

Material necessary: A small plastic squeeze bottle, 1/3 full of household ammonia, for detecting chlorine leaks. When ammonia fumes contact chlorine gas a visible smoky vapor is produced. (Wipe up any splashed liquid ammonia.)

1. Open chlorine cylinder valve 1/4 turn and close immediately.
2. Squeeze ammonia bottle at gasket and yoke assembly area: if no vapor appears the seals are tight and it is OK to proceed to the next step.
3. Open chlorine cylinder valve 1/4 turn, leave open, and recheck for chlorine leaks. (1/4 turn open of the cylinder valve is all that's required. The reason we specify 1/4 turn is that the valve can be closed with only 1/4 turn. In an emergency you can shut it off quickly and safely. The wrench stays on the cylinder valve while cylinder is open.)
4. Place one vacuum regulator in standby. This is done by turning the reset knob two turns counterclockwise and then returning it two turns clockwise. The front bolt should remain protruding per the diagram on the vacuum regulator.
5. Turn on water supply or booster pump to ejector and set rate valve to desired flow rate. Read flow rate at center of ball on meter tube scale.
6. Rate valve is not a shut off valve: it is a flow rate control only. To shut off chlorine feed close the chlorine cylinder valve.

SECTION VI: SHUT DOWN PROCEDURE

1. Close both chlorine cylinder valves while pump is still running.
2. Wait for ball to rest at bottom of meter tube and the front bolt to be below the surface.
3. Break vacuum by removing the tubing at one of the vacuum regulators and reattach. (Repeat at least 2 times for more complete removal of gas from the system.)
4. Shut down the water supply to the ejector.

This procedure of shut down must be followed before a vacuum regulator is removed from a cylinder.

NOTE: After installing the vacuum regulator with a new lead gasket on a new cylinder, the vacuum tubing should be removed to allow air to enter the system and break the vacuum. Not releasing vacuum and turning on cylinder will slam the diaphragm forward and could cause damage to the diaphragm assembly. You can also accomplish breaking the vacuum by turning the rate valve out of the bonnet. Either way is acceptable.

SECTION VII: CHANGING CYLINDERS

When one cylinder is empty, and the system has switched to feed from the other cylinder then the empty cylinder must be replaced, and that vacuum regulator must be placed in standby mode.

1. Tightly close the valve of the empty chlorine cylinder. Follow all applicable guidelines in changing chlorine cylinders.
2. After replacing the empty with a full cylinder, inspect the vacuum regulator, the vacuum regulator filter and (using a new lead gasket) mount the vacuum regulator on the full cylinder.
3. Turn the front knob two turns counterclockwise and then return two turns clockwise to place the vacuum regulator in standby. The front bolt should remain protruding per the diagram on the vacuum regulator.

SECTION VIII: RATE VALVE OPERATION

Turn the rate valve counterclockwise to open it completely. Further turns will completely remove the rate valve from the flow meter tube, which will cause a loss of Cl₂ feed. (See Appendix for servicing instructions.)

The O-ring seals for the rate valve are locked in place under the valve bonnet and do not come out when the rate valve is pulled out of the bonnet.

PREVENTATIVE MAINTENANCE NOTE: Rate valves which are not exercised frequently may experience a buildup of a white powdery substance which precipitates out of the chlorine gas. In order to avoid this, buildup, which can cause the rate valve to become stuck in place, it is recommended that the rate valve be periodically exercised. See Appendix for rate valve maintenance instructions.

SECTION IX: TROUBLESHOOTING

(I) PRESSURIZED LEAKS

1. Pressurized chlorine leaks are a safety hazard to life and equipment and should be corrected immediately. When searching for this type of leak there are basic safety rules to follow.

- a. Air breathing pack should be readily available, and personnel should know how to use it properly.
 - b. Exhaust fan switch should be located near outside entrance with alternate outside switch
 - c. Chlorine cylinder wrench should remain on the cylinder whenever cylinder is open.
 - d. Plastic squeeze bottle 1/3 full of household ammonia.
 - e. Buddy system used (two people capable of operating system).
2. If a leak is detected the following should be checked first:
- a. The lead gasket between the chlorine cylinder valve and the vacuum regulator inlet assembly.
 - i. Tighten the half dog screw on the vacuum regulator yoke assembly which is used to secure the inlet assembly to the chlorine cylinder valve.
 - ii. Always use a new lead gasket.
 - b. Chlorine cylinder valve packing.
 - i. Tighten the cylinder valve with care, not excessively! Close the valve if problem persists and notify your chlorine supplier.
 - ii. If valve is the problem try to move cylinder with a high degree of safety to an outside location.
 - c. Chlorine leaking out the vent due to the inlet safety shut off valve having dirt on the valve seat.
 - i. Close the chlorine cylinder valves.
 - ii. Wait until the metering ball drops to zero on the flow tube.
 - iii. Turn off water supply to ejector.
 - iv. Now remove the leaking vacuum regulator from the cylinder valve.
 - v. See Appendix for inlet safety shut off valve servicing instructions.
 - vi. After servicing and remounting chlorinator with a new lead gasket, pull a vacuum test before you open the chlorine cylinder valve. See Section IV: "Chlorination System Vacuum Test".

(II) NO CHLORINE FEED

Possible causes:

1. No vacuum being produced by ejector.
 - a. Remove poly tubing from ejector fitting and place your finger on it; you should feel a strong suction.
 - b. If you feel no suction (vacuum) check in this order:
 - i. Nozzle (See Appendix): Turn off water supply and remove nozzle from ejector.
 - (1) It may be clogged or damaged by a stone or other foreign matter. Flush out or run pipe cleaner through carefully.
 - (2) If there is a build-up of rust, iron, or manganese, place the nozzle in a Muriatic acid for five minutes and rinse with water. If you see a black syrup substance you may find it necessary to clean the nozzle on a preventative maintenance schedule.
 - ii. Inlet Water Supply. Check that it is sufficient. Refer to nozzle curves in back of manual.
 - iii. Reduced city water pressure.
 - iv. Y strainer needs cleaning.
 - v. Booster pump cavitating (lost its prime).
 - vi. Booster pump insufficient boost due to wear or single phasing due to loss of one leg of power.
 - vii. Booster pump may have flooded suction.
 2. Chlorine flow blocked at vacuum regulator inlet assembly.
 - a. The Inlet filter could be clogged.
 3. Out of Chlorine.
 - a. The scale would read 150 lbs. lighter than when cylinder was new.
 - b. Meter tube ball would be at zero.

APPENDIX A – SERVICING THE SYSTEMSECTION A-1: VACUUM REGULATOR

1. Follow the usual shut-down procedure carefully before removing any vacuum regulator from the gasbottle.
2. Make certain that the switchover mechanism indicated the regulator is in the “IN USE” position.
3. Using a 5/32" Allen-wrench, remove the socket head cap screw (BTE-511-500) and Kynar washers
4. Unscrew the reset knob (VRE-541-500) from the front body.
5. Remove the two yoke screws (BTE-STA-125) and pull the yoke assembly out of the vacuumregulator back body.
6. Unscrew the body bolts (BTE-STA-129 & BTE-STA-124) from the back body and pull the back body away from the front body until they separate.
7. Using a pair of pliers and being careful to only grip the smooth portion of the shaft, remove the guide pin (VRE- 546-500) from the diaphragm assembly by turning clockwise.
8. To disassemble the diaphragm, grasp the front and rear plates and turn them apart (they are threaded together with normal, right-hand thread and may require the aid of a vice to disassemble).
9. Inspect all O-rings and replace if necessary.
10. Replace the guide pin (VRE-546-500).
11. After inspection and replacement of all necessary parts, reassemble the unit in reverse order.

SECTION A-2: INLET ASSEMBLY

WARNING: If the vacuum regulator leaks gas out the vent or any other place on the body the problem is most likely caused inside the yoke assembly. It is recommended that the yoke assembly be disassembled by a person experienced in Chlorine Vacuum Regulator maintenance because if it is notdone properly dangerous leakage of pressurized gas could result.

1. Remove the inlet assembly from the yoke plate by slipping off the PVC retainer clip (VRE-142-500)that holds it to the yoke.
2. Remove the inlet filter material from the inlet capsule (VRE-141-501).
3. Disassemble the inlet assembly using a small flat-head screwdriver to hold the inlet valve (VRE-112-500) and a pair of pliers (and a protective cloth) to grip the vent plug (VRH-111-500) to unscrew these two parts. Take care as this assembly is under spring tension and small parts may be difficult to find if dropped.
4. Unscrew the seal plug (VRE-182-500) from the inlet capsule.
5. Remove the valve seat (VRE-110-500) from the inlet capsule by simply pushing the exposed threaded portion up through the inlet capsule. Note that the O-ring ORE-VIT-011 is attached to this seat.
6. Clean the inlet capsule, inlet spring (SPE-104-100) and inlet valve using a soft cloth or plasticcleaning pad. Do not use steel wool or other metal cleaning sponges on the inlet valve.
7. Using all new O-rings and new parts as needed, reassemble in reverse order.

SECTION A-3: REMOTE METER

(I) CLEANING THE RATE VALVE

1. Unscrew the rate valve knob and stem (by hand) completely out of the top meter block.
2. In low capacity systems (10 PPD or below) check to see if the point of the valve stem is broken or bent. If it is damaged it must be replaced.
3. Replace O-Rings on the rate valve stem.
4. Lubricate the new O-Rings lightly with Flourolube grease before replacing the rate valve and knob into the top meter block.

(II) CLEANING THE METER TUBE

1. While holding the glass meter tube (to prevent it from falling) unscrew the inlet plug at the base of the bottom meter block, until the meter tube can be removed.
2. Remember to be careful not to lose the stops or ball in the following steps.
3. Remove the white stops at either end of the tube (you could use a paper clip).
4. Soak the tube in warm water with a cleaner like lime away or Muriatic Acid. Also, brush the inside of the tube with a pipe cleaner.

NOTE: Always follow safety precautions with Muriatic Acid and other chemicals.

5. Dry the meter tube and reinstall the ball and stops.
6. It is recommended that new meter tube gaskets be used when reinstalling the meter tube.
7. Remove the inlet plug completely and inspect the O-Rings. If it has been more than 12 months since they were changed or if there is any noticeable damage, the O-Rings should be replaced.
8. Reinstall the inlet plug, meter gaskets and meter tube, making sure to center the tube on the top and bottom meter gaskets.
9. Tighten the inlet plug with reasonable force to make a seal. Do not use excessive force.

SECTION A-4: EJECTOR/CHECK VALVE ASSEMBLY

(I) LOSS OF VACUUM AT THE EJECTOR: If vacuum is lost at the ejector and water supply is sufficient, then the nozzle is most likely clogged, broken or loose. Before working on the ejector, it must first be isolated so that water will not leak when the ejector is removed.

1. First detach the intake side (nozzle) of the ejector from the pipeline.
2. For 3/4" line size ejectors rotate the complete ejector body counterclockwise. This loosens the threaded portion of the nozzle from the diffuser. It also eliminates the need for pliers on the nozzle which could damage the plastic. For 1 1/4" line size ejectors remove the two flanges to remove the ejector.
3. Inspect the nozzle for:
 - Pipe scale, stones, dirt, etc...
 - Build-up of iron, manganese, calcium, etc...
4. The nozzle should be soaked and brushed with warm water mixed with a cleaner like Muriatic Acid. NOTE: TAKE CARE NOT TO SCRATCH OR ATTEMPT TO MODIFY THE ORIFICE IN ANY WAY.

5. Using two new ORE-BUN-121 O-rings the ejector can now be reassembled. When reassembling 3/4" line size ejectors the nozzle and diffuser should be screwed together hand tight leaving the ejector body 90 degrees to the left of its final position. Once the nozzle and diffuser are hand tight, the ejector can then be turned the final 90 degrees.


WARNING: Do not use excessive force in tightening the nozzle, diffuser and ejector assembly. The ejector is constructed of PVC and excessive force can break the parts.

(II) SERVICING THE EJECTOR CHECK VALVE ASSEMBLY: If water leaks back into the system, this means that the ejector check valve has failed. This could be caused by incorrect assembly, a failed gasket, O-Ring or diaphragm, or foreign material lodged in the check valve.


1. Remove the four bolts holding the ejector body together.
2. Inside you will find a diaphragm assembly and a spring.
3. The diaphragm assembly can usually be unscrewed by hand. If it is too tight, carefully try large jaw pliers or a vice. Note that a plastic support diaphragm is on the top side of the rubber diaphragm. The purpose is to protect the softer rubber diaphragm in installations with high pressure.
4. Inspect the rubber diaphragm for holes or weak points.
5. Inspect the ORE-CEM-210 O-Ring. Replace if damaged.
6. Reassemble the diaphragm assembly, preferably with a new rubber diaphragm, DIE-104-500.
7. Install the assembly in the recess between the ejector body halves being careful to install the spring properly below the assembly.

Note: Pressure combinations that plot below the line for any given nozzle are acceptable for operating that nozzle at the stated chemical feed rate for that chart. Pressure combinations that fall above the line for any given nozzle are not acceptable.


NOZZLE SIZING CHART (50 PPD / 1000 gr/hr)

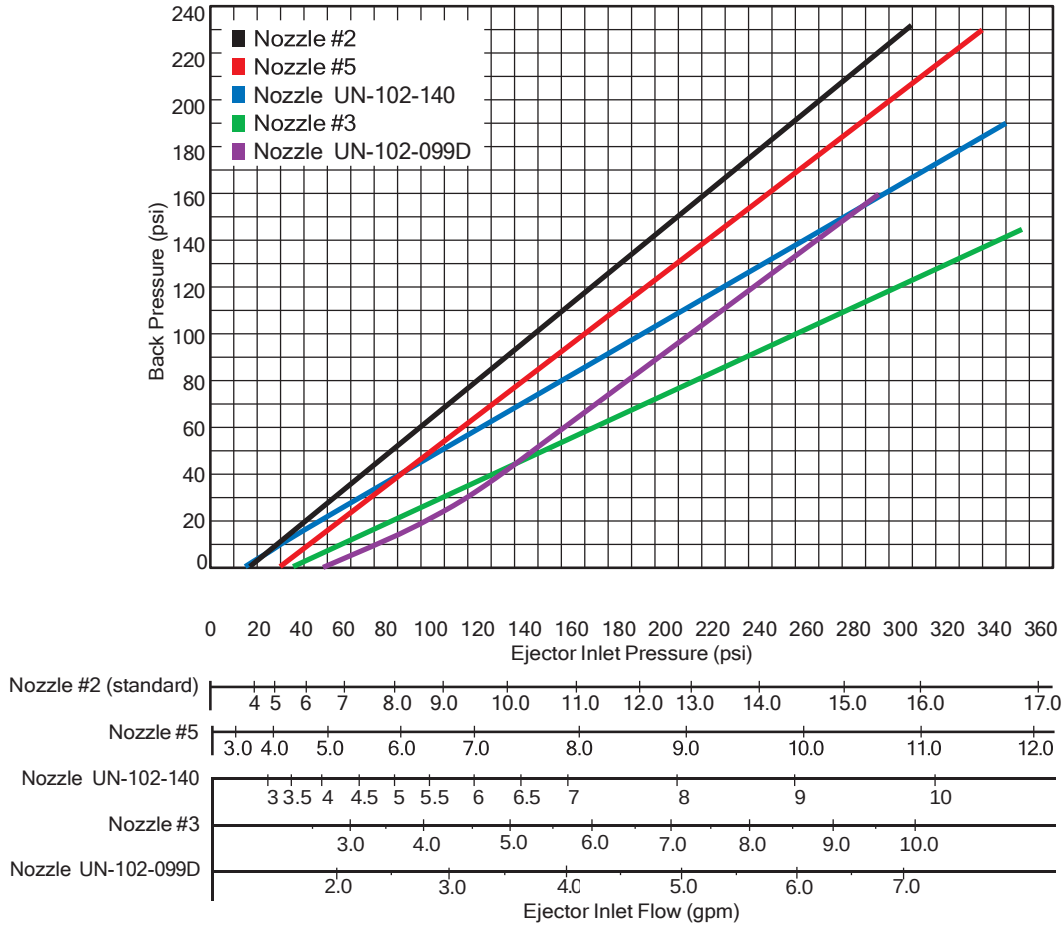


NOZZLE SIZING CHART (100 PPD / 2000 gr/hr)

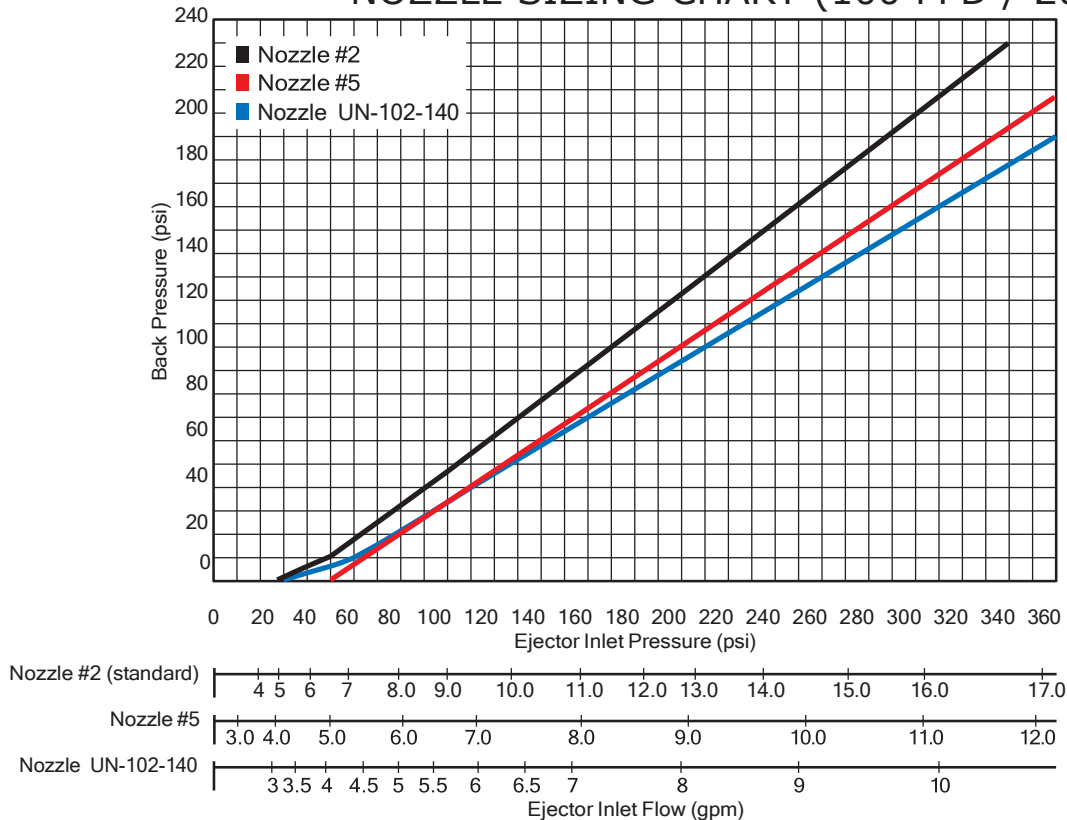

NOZZLE SIZING CHART (250 PPD / 5 kg/hr)

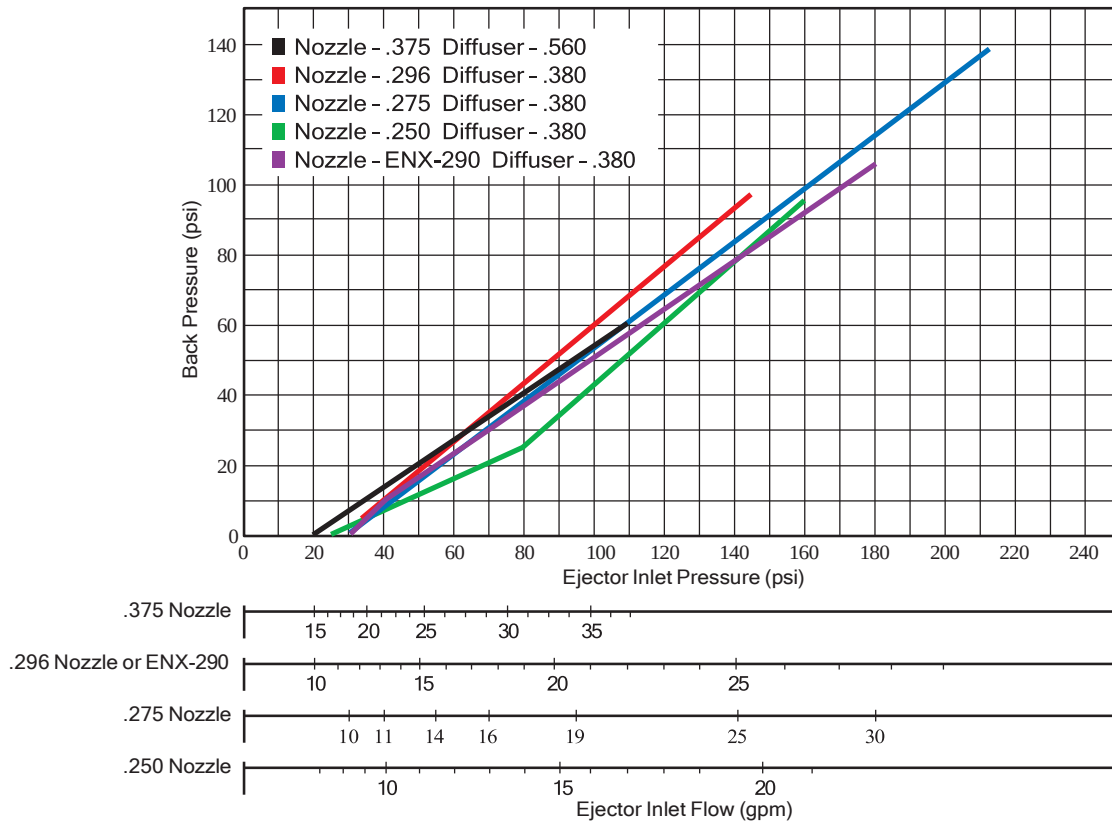

NOZZLE SIZING CHART (500 PPD / 10 kg/hr)

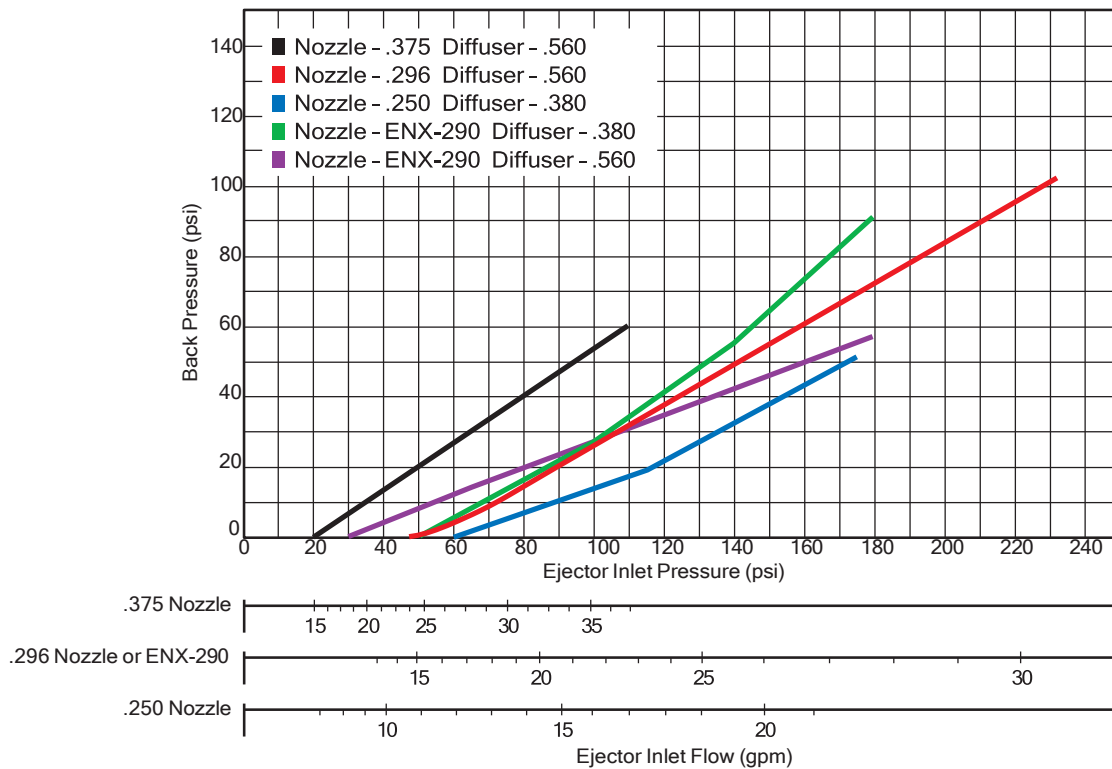

Nozzle Tables

50 PPD (1 Kg/hr)

Nozzle >	2		5		UN-102-140		3		UN-102-099D	
Ejector Backpressure	PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM	
0	16	4.0	30	4.3	15	2.8	35	2.3	48	1.9
10	25	5.0	43	4.8	28	3.5	55	2.9	70	2.4
20	40	5.8	55	5.1	48	4.1	75	3.5	92	2.8
30	50	6.3	69	5.4	64	4.5	95	4.1	110	3.2
40	65	7.1	81	6.0	82	5.3	120	4.8	124	3.5
50	80	8.0	95	6.6	100	5.7	141	5.4	137	3.7
60	90	8.6	109	6.8	120	6.3	162	6.0	151	4.0
70	105	9.1	120	7.2	132	6.5	183	6.6	164	4.3
80	115	9.6	134	7.6	150	6.9	205	7.3	178	4.6
90	127	10.0	147	7.8	170	7.4	226	7.9	191	4.8
100	139	10.4	160	8.1	185	7.8	247	8.5	205	5.1
110	152	10.8	173	8.4	202	8.2	268	9.1	218	5.4
120	165	11.3	188	8.7	221	8.5	290	9.8	232	5.7
130	176	11.8	200	9.0	239	8.8	-	-	245	5.9
140	189	12.2	213	9.2	255	9.1	-	-	259	6.2
150	200	12.7	226	9.5	273	9.4	-	-	272	6.5
160	216	13.3	240	9.8	290	9.7	-	-	286	6.8

100 PPD (2 Kg/hr)

Nozzle >	2		5		UN-102-140	
Ejector Backpressure	PSI @ GPM		PSI @ GPM		PSI @ GPM	
0	25	5.0	50	5.1	30	3.3
10	50	6.7	65	5.4	59	4.3
20	65	7.3	80	6.1	79	5.0
30	75	8.0	95	6.5	95	5.6
40	89	8.6	110	7.0	110	6.0
50	104	9.0	125	7.2	126	6.4
60	118	9.3	139	7.4	145	6.9
70	131	9.9	155	7.9	160	7.2
80	142	10.5	170	8.3	180	7.5
90	155	11.0	185	8.7	195	7.9
100	170	11.5	200	9.0	210	8.2
110	180	11.9	213	9.3	229	8.5
120	194	12.7	228	9.5	243	8.9
130	208	13.2	244	9.9	260	9.2
140	222	13.7	260	10.2	279	9.5
150	235	14.2	275	10.4	295	9.8
160	250	14.5	291	10.8	310	10.0


Nozzle Tables

250 PPD (5 Kg/hr)


Nozzle >	0.375		0.296		ENX-290		0.275		0.250	
Throat >	0.560		0.380		0.380		0.380		0.380	
Ejector Backpressure	PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM	
0	20	15.0	-	-	30	11.5	30	10.0	25	7.5
10	35	20.0	40	13.2	39	13.0	42	12.0	48	10.8
20	50	25.0	52	15.0	55	15.7	55	14.0	69	12.5
30	65	28.0	65	16.7	69	17.5	70	16.0	85	14.5
40	80	32.0	77	18.2	84	19.4	82	18.0	98	15.8
50	95	34.0	87	19.7	97	20.9	95	19.0	108	17.0
60	110	38.0	100	21.0	113	22.3	110	21.5	120	18.0
70	-	-	113	22.3	127	23.5	122	23.5	130	19.0
80	-	-	125	23.3	142	25.5	135	24.0	143	19.6
90	-	-	137	24.5	157	26.2	150	26.0	155	20.3
100	-	-	148	25.4	172	27.3	162	27.5	-	-
110	-	-	160	26.3	-	-	175	29.0	-	-
120	-	-	172	27.0	-	-	189	31.0	-	-
130	-	-	183	27.8	-	-	201	33.0	-	-
140	-	-	196	28.7	-	-	213	35.0	-	-
150	-	-	208	29.4	-	-	-	-	-	-
160	-	-	217	30.0	-	-	-	-	-	-

500 PPD (10 Kg/hr)

Nozzle >	0.375		0.296		ENX-290		ENX-290		0.250	
Throat >	0.560		0.560		0.560		0.380		0.380	
Ejector Backpressure	PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM		PSI @ GPM	
0	20	15.0	48	14.5	30	11.0	50	15.0	60	12.0
10	35	20.0	72	18.3	52	15.5	67	17.5	90	15.0
20	50	24.9	90	20.6	80	19.3	85	20.0	117	17.5
30	64	27.2	105	22.2	107	22.4	104	22.1	135	19.3
40	80	31.0	123	24.2	132	25.3	118	23.6	154	20.5
50	96	34.0	140	25.5	160	26.5	132	25.1	172	22.0
60	110	37.0	160	26.7	-	-	145	25.8	-	-
70	-	-	175	27.4	-	-	157	26.5	-	-
80	-	-	192	28.5	-	-	168	27.0	-	-
90	-	-	210	29.2	-	-	179	27.7	-	-
100	-	-	229	30.5	-	-	-	-	-	-

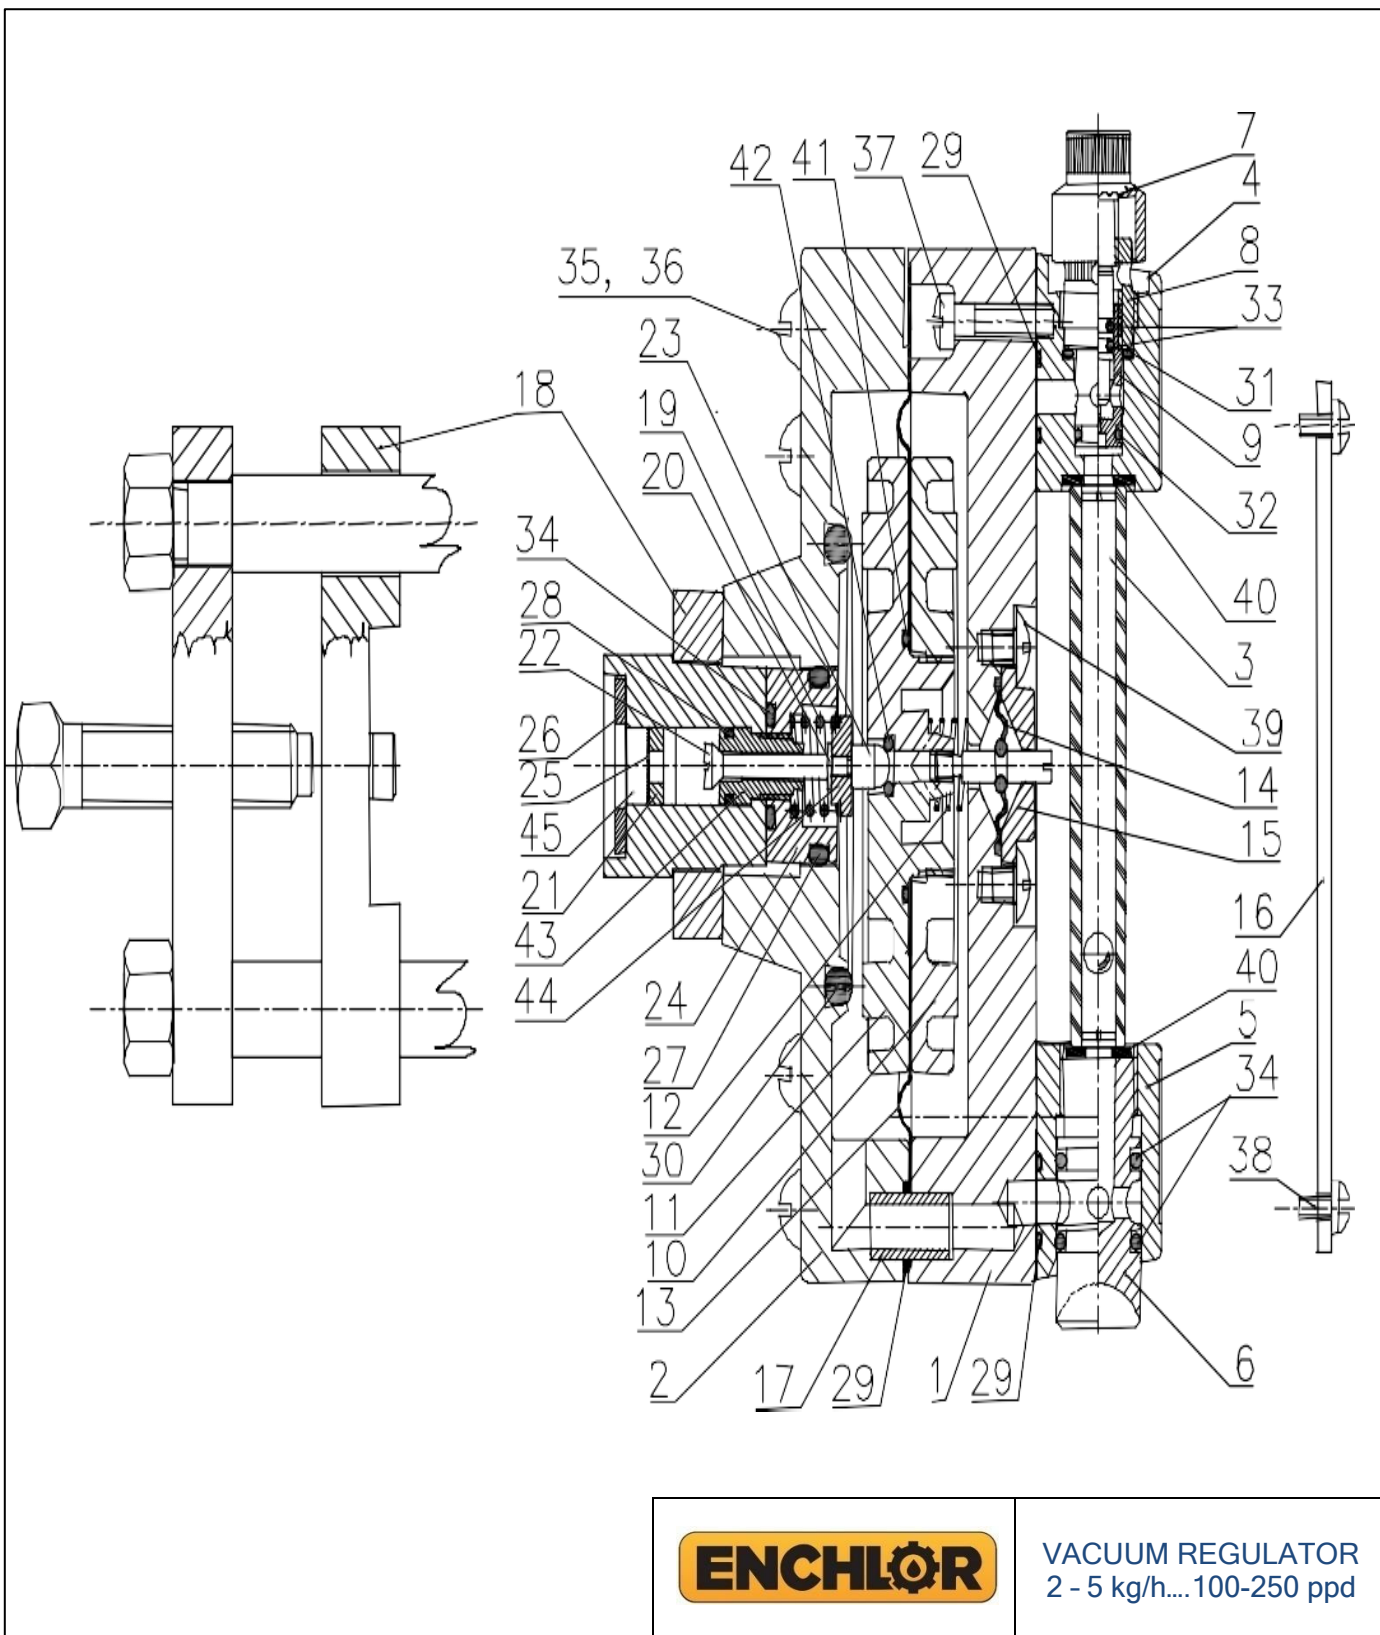


Item#	Qty.	Part #	Description	Item#	Qty.	Part #	Description
1	1	Enc-107	Front Body	24	1	U-182	Threaded inlay
2	1	Enc-160	Back Body	25	1	W-101	Filtering Sleeve
3	1	*(A-108-8) #(A-108-9)	Gas mass flowmeter	26	1	G-120	Lead Gasket
4	1	M-110	Rotameter holder (upper)	27	1	OV-11-212	O-RING
5	1	M-166	Rotameter holder (bottom)	28	1	OV-11-011	O-RING
6	1	U-140	Inlet Plug	29	3	OV-11-012	O-RING
7	1	*(A-659-3) #(A-659-4)	Mounted needle - valve	30	1	OV-11-332	O-RING
8	1	V-124	Valve holder	31	1	OV-11-110	O-RING
9	1	*(V-125-3) #(V-125-4)	Valve seat	32	1	OV-11-010	O-RING
10	1	D-269	Diaphragm Nut	33	1	OV-11-006	O-RING
11	1	A-363	Mounted Diaphragm holder	34	3	OV-11-112	O-RING
12	1	S-100	Spring	35	2	N-125	Screw
13	2	D-106	Diaphragm	36	6	N-124	Screw
14	1	D-104	Sealing Diaphragm	37	4	N-126	Screw
15	1	D-137	inlay	38	2	N-127	Screw
16	1	HU-141A	Titel Label	39	2	N-128	Screw
17	1	U-162-1	Transfer Pipe	40	2	*(G-100-3) #(G-100-4)	Gasket
18	1	HA-159	Mounted Yoke	41	1	OV-11-028	O-RING
19	1	S-104	Spring	42	1	OV-11-009	O-RING
20	1	W-113	Inlay	43	1	W-110	Valve seat-Teflon
21	1	U-184	Filter inly	44	1	U-183	Spring Plate
22	1	W-112	Valve screw	45	1	R-239	Glass – wool filter
23	1	V-111	Closed Nut	**	2	F-100	Mounted pipe Joint
				**	1	HF-108	Threaded closing plug
Notes: * FOR 2 kg/h # FOR 5 kg/h ** not illustrated on the drawing				 BILL OF MATERIALS VACUUM REGULATOR 2 - 5 kg/h.... 100-250 ppd			

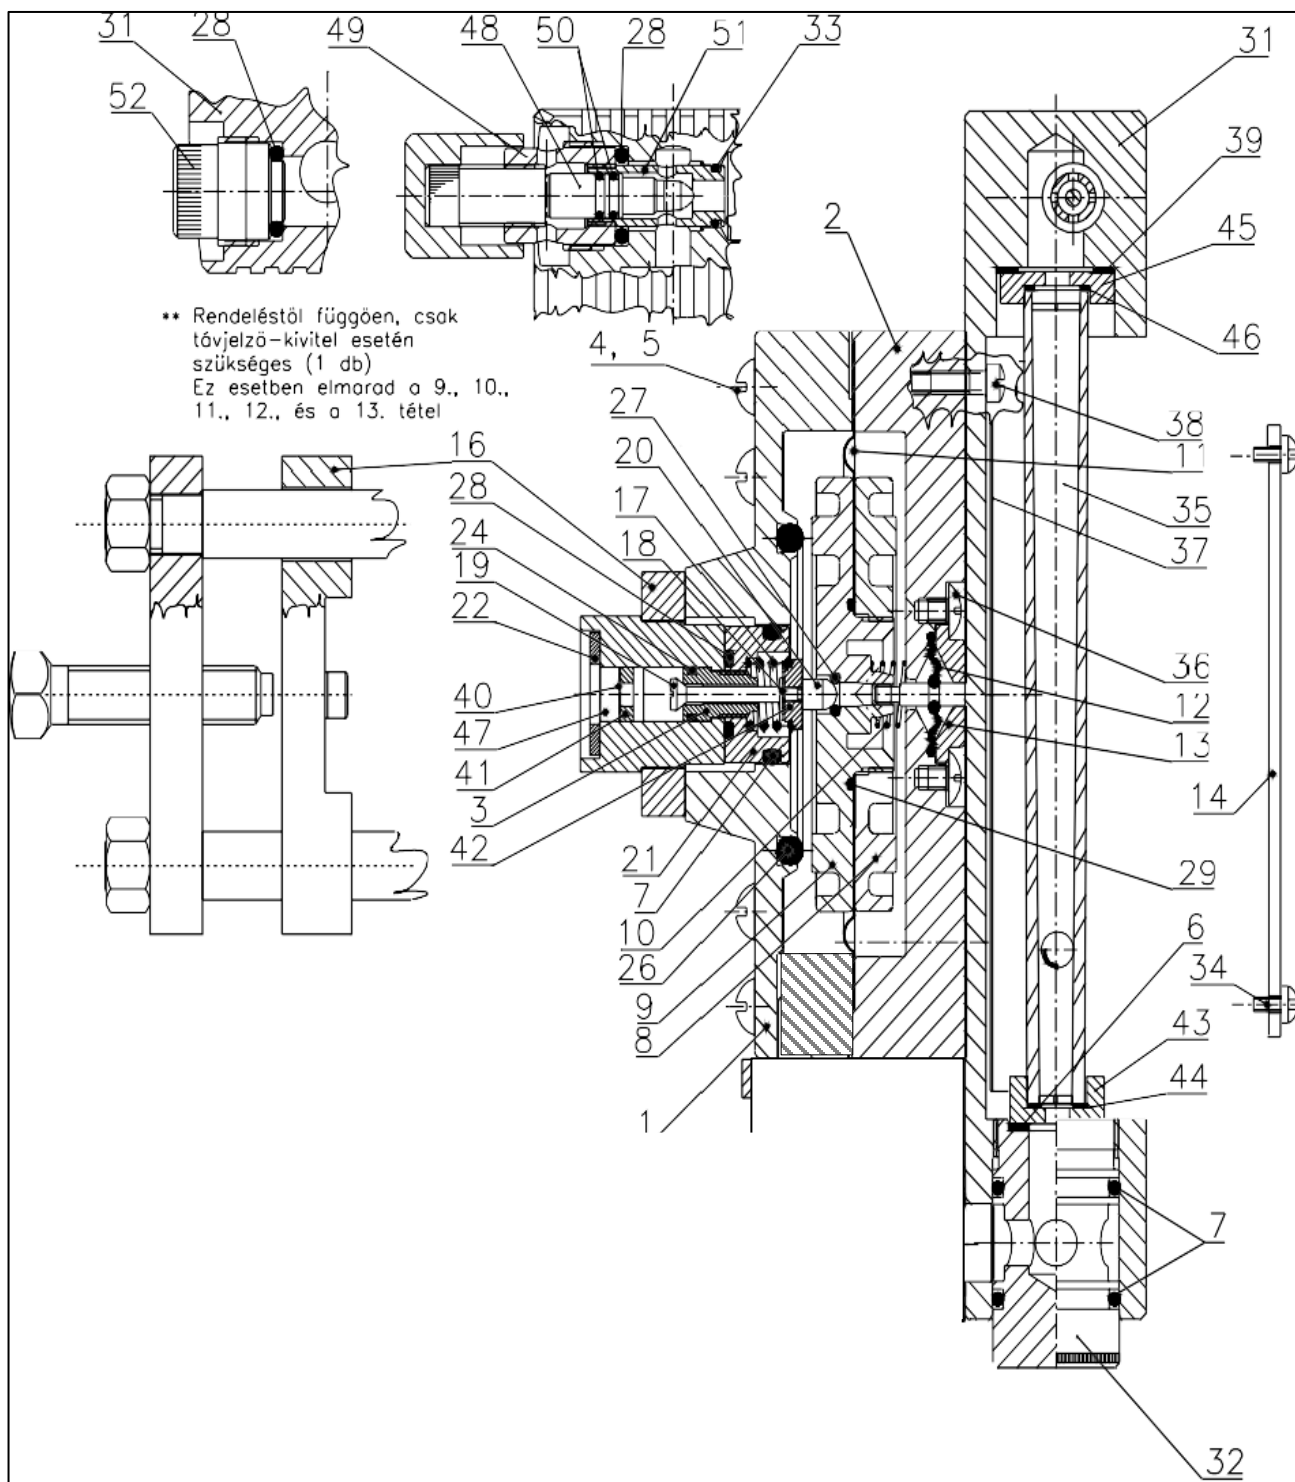


ENCHLOR

VACUUM REGULATOR
10 kg/h 500 ppd

Item#	Qty.	Part #	Description	Item#	Qty.	Part #	Description
1	1	U-234	Back Body	27	1	OV-11-009	O-ring
2	1	AX-226	Mounted front body	*+28	2	OV-11-112	O-ring
* 3	1	W-110	Valve seat	29	1	OV-11-028	O-ring
4	2	N-125	Screw	30	2	U-235	Spanner plate
5	6	N-124	Screw	31	1	HM-199	Flowmeter holder
6	1	G-115	Sealing	32	1	U-232	Measuring inlet
* 7	3	OV-11-212	O-ring	+ 33	1	OV-11-012	O-ring
8	1	U-269	Diaphragm nut	34	2	N-127	Screw
9	1	A-363	Mounted diaphragm holder	35	1	A-129-7	Measuring tube
10	1	S-100	Spring	36	2	N-128	Screw
11	2	D-106	Diaphragm	37	1	U-247	Shading plate
12	1	D-102	Sealing diaphragm	38	4	N-126	Screw
13	1	U-137	Inlay	39	1	G-116	Sealing
14	1	HU-273-10	Title label	* 40	1	W-101	Filtering sieve
15	1	A-321	Mounted knee	* 41	1	U-184	Filter inlay
16	1	AX-209	Mounted yoke	* 42	1	U-183	Spring Plate
17	1	S-104	Spring	43	1	M-127	Sealing
* 18	1	W-113	Inlay	44	1	G-118	Sealing
* 19	1	W-112	Valve screw	45	1	M-128	Sealing
* 20	1	V-111	Closed nut	46	1	G-117	Sealing
* 21	1	U-182	Threaded inlay	* 47	1	R-239	Glass wool filter
22	1	G-120	Lead gasket	+ 48	1	W-117	Mounted valve pin
23	4	N-138	Screw	+ 49	1	W-118	Valve holder
* 24	1	OV-11-011	O-ring	+ 50	1	OV-11-010	O-ring
				+ 51	1	W-116	Valve
26	1	OV-11-332	O-ring	+ 52	1	U-438	Closing nut
							BILL OF MATERIALS. VACUUM REGULATOR 10 kg/h 500 ppd

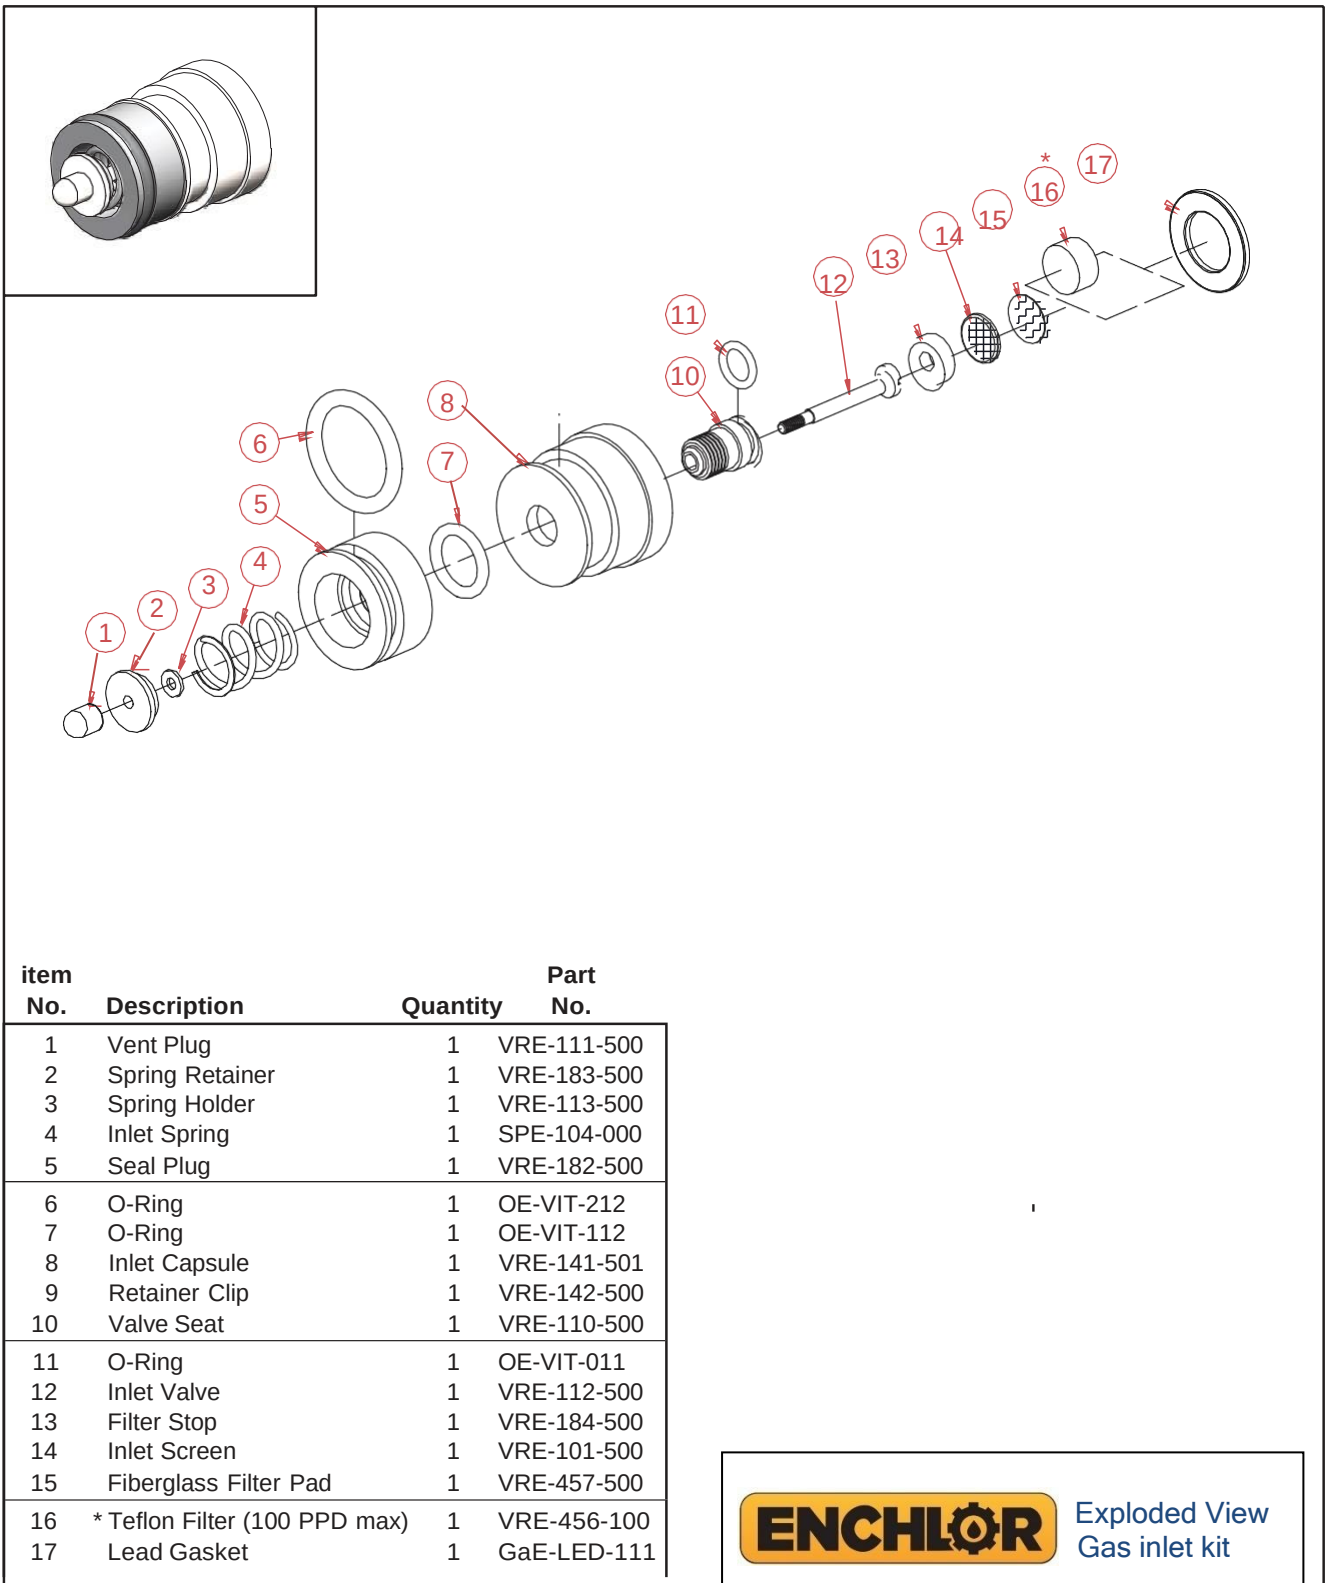

Exploded View
Gas inlet kit

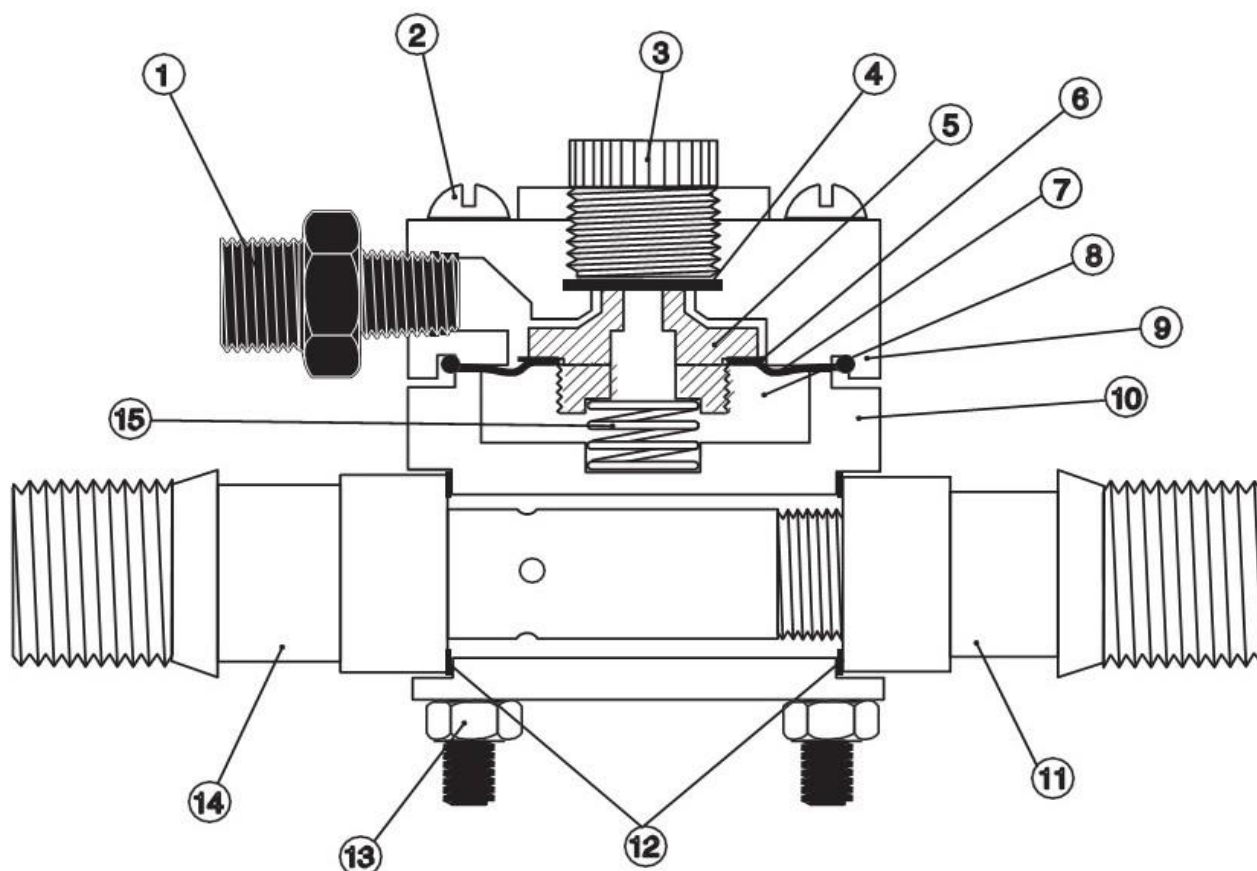


ITEM NO.	DESCRIPTION	QUANTITY	PART NO.
1	3/8" Tubing Connector	1	TCE-64
2	5/16 - 18 x 3 1/2" Bolt	4	BTE-135
3	Seat Plug	1	EJE-311
4	Valve Seat	1	GE-VIT-122
5	Diaphragm Bolt	1	EJE-206
6	Support Diaphragm	1	DIA-105
7	Diaphragm	1	DIA-104
8	Diaphragm Nut	1	EJE-146
9	Top Body	1	EJE-208-250
10	Bottom Body	1	EJE-153
11	Multi-Purpose Diffuser	1	EJE-982
12	O-Ring	2	OE-BUN-214
13	5/16 - 18 Nut	4	NTE-104
14	Nozzle	1	* See Note
15	Spring	1	SPE-106

***Note:** Available Nozzles:


- #9 - ENA-015-156 (50 ppd std.)
- #10 - ENA-012-191 (100 ppd std.)




EJECTOR
Model: EJE-100-CL2

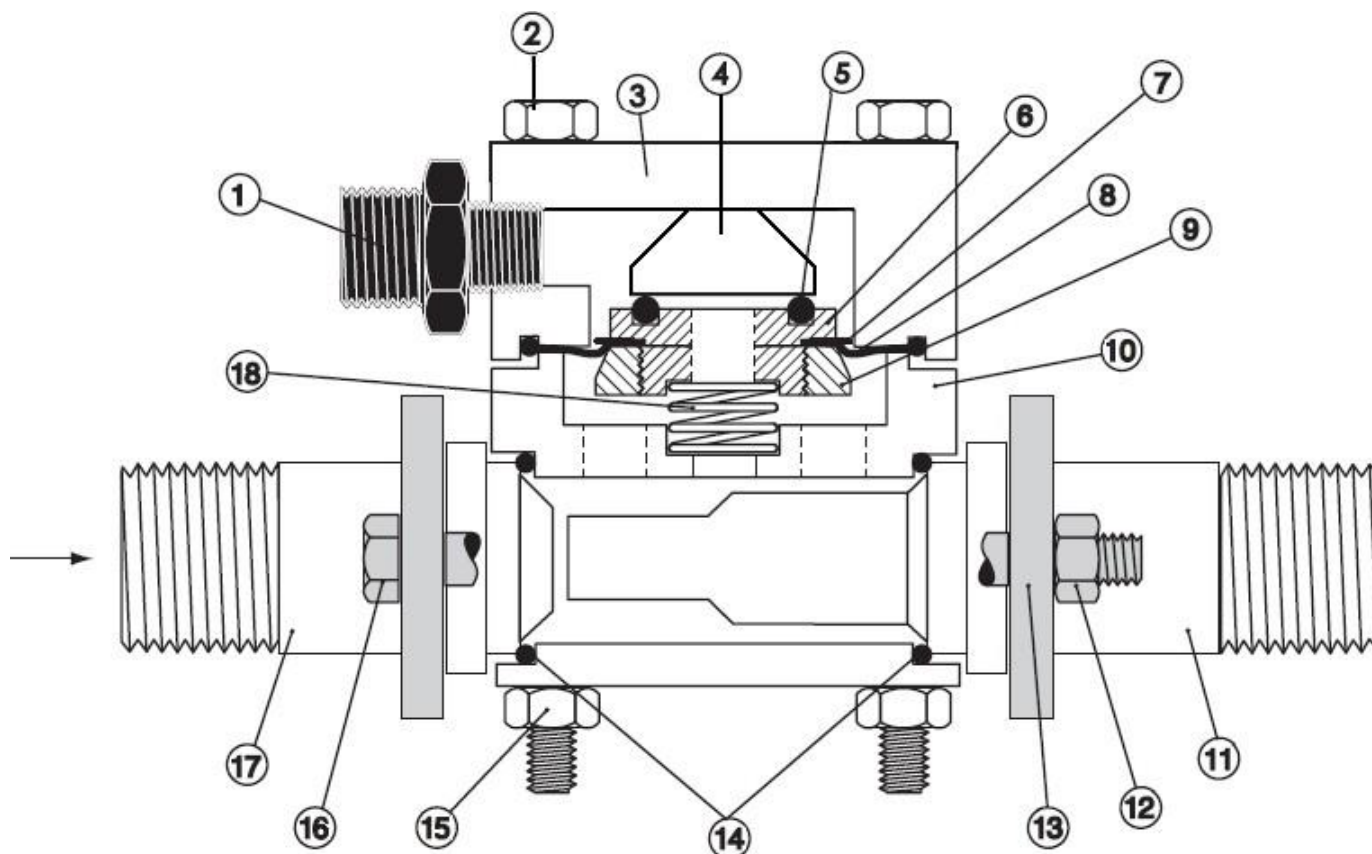


Item#	Qty.	Part #	Description	Item#	Qty.	Part #	Description
1	1	TCE-108	Tube Connector 1/2" NPT x 5/8" tube	10	1	EJE-153	Bottom Body
2	4	BTE-136	5/16- 18 x 4" Bolt	11	1	*TTE-189-386	Throat
3	1	EJE-238-500	Top Body	12	2	NTE-106	3/8- 16 Nut
4	1	CVE-521	Valve Seat	13	2	EJE-136	Flange
5	1	OE-CEM-210	O- Ring	14	2	OE-BUN-214	O- Ring
6	1	EJE-236	Diaphragm Bolt	15	4	NTE-104	5/16- 18 Nut
7	1	DIA- 105	Support Diaphragm	16	2	BTE-145	3/8- 16 x 4- 1/2" Bolt
8	1	DIA- 104	Diaphragm	17	1	*TNE-187-300	Nozzle
9	1	EJE-146	Diaphragm Nut	18	1	SPE-106	Spring
*NOTE: Several different nozzle / throat combinations are available to work within given hydraulic conditions. The above sizes are supplied as standard equipment. Refer to nozzle sizing charts for correct sizing.							EJECTOR Model: EJE-250-CL2 Model: EJE-500-CL2

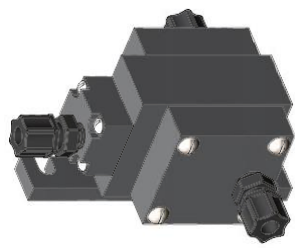


SP-100

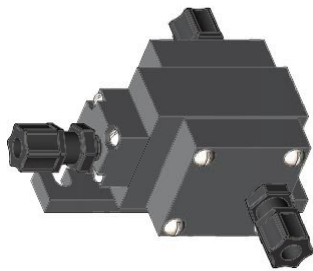

SP-200

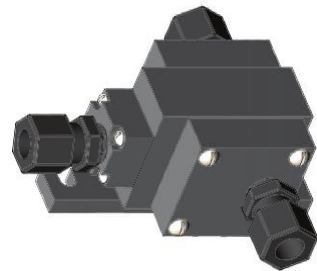

SP-500

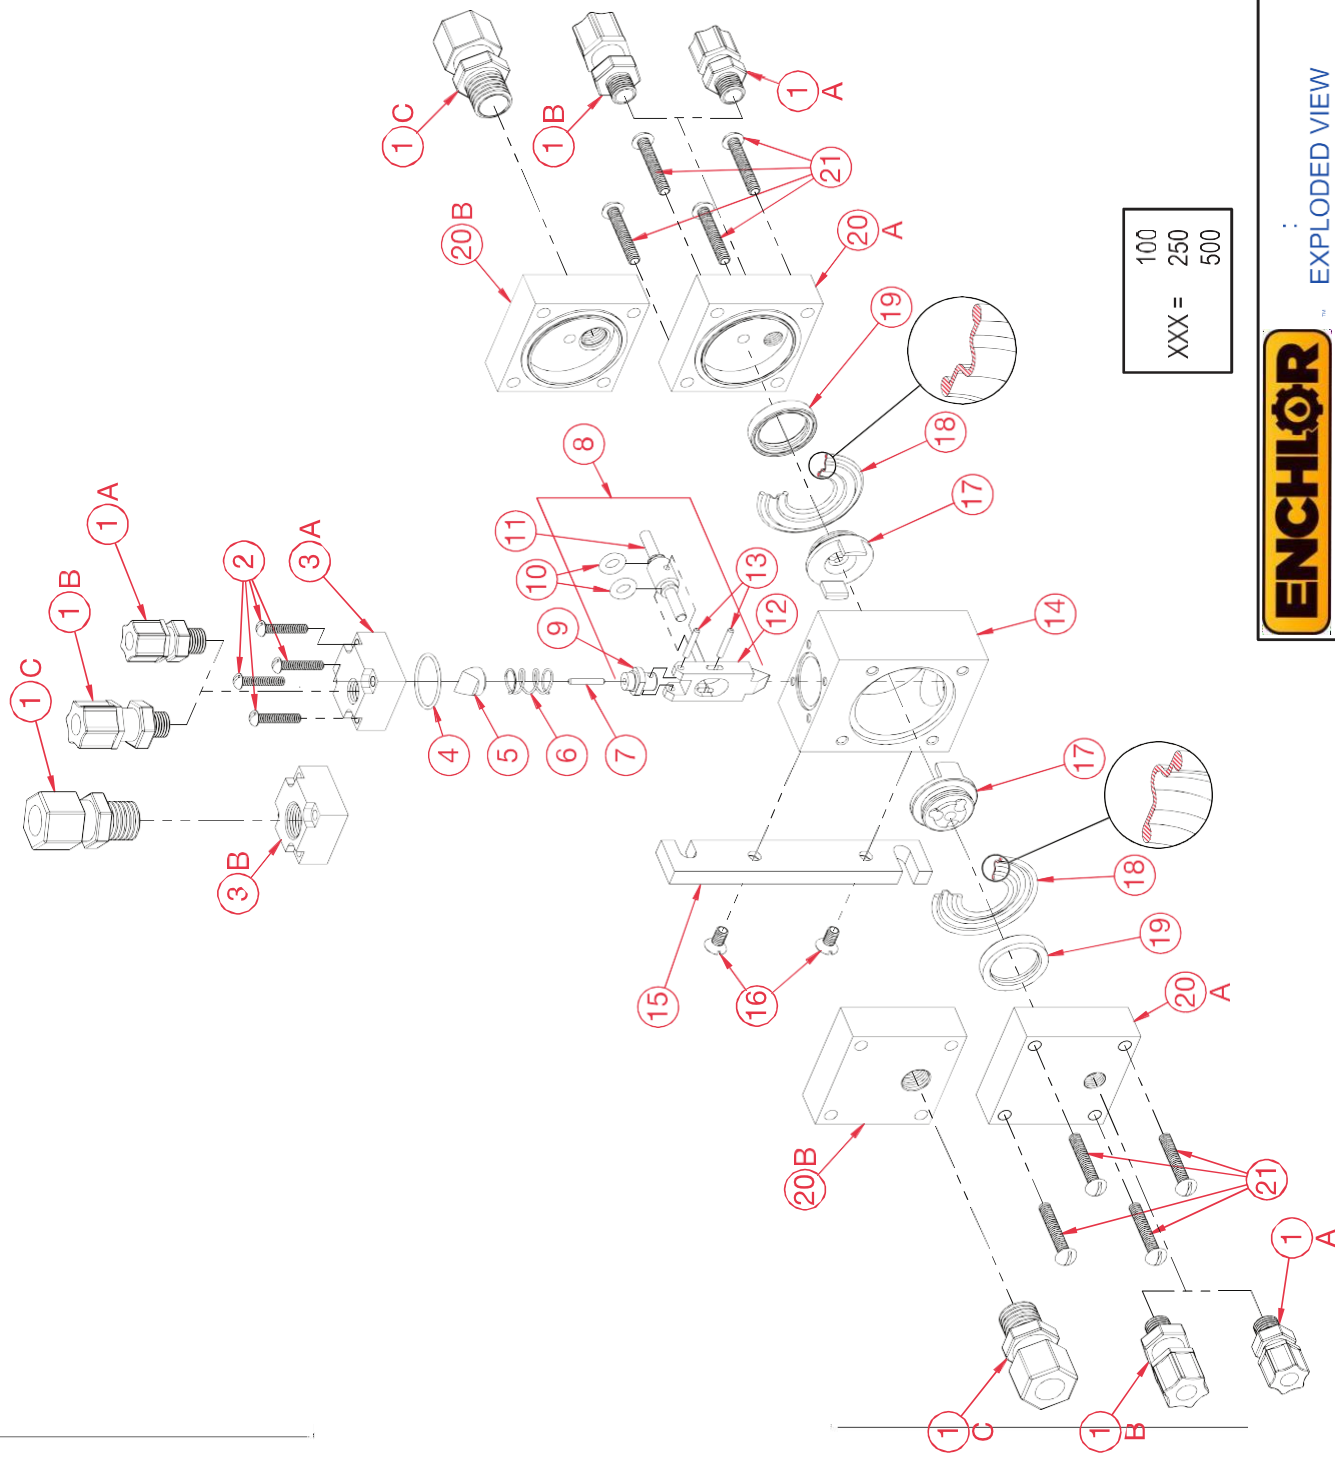

XXX =	100	250	500
-------	-----	-----	-----

ENCHLÖR



EXPLODED VIEW
SWITCHOVER MODULE Dwg. No. SP-XXX, EXP

Item No.	Description	Quantity	Part No.	Item No.	Description	Quantity	Part No.
1A	PM 3/8" Tube 1/4" NPT Tubing Connector	3	BKF-64	PM	Part & Maintenance Kit (100 PPD)	1	KT1-100-SOM
1B	PM 1/2" Tube 1/4" NPT Tubing Connector	3	BKF-84	PM	Part & Maintenance Kit (250 PPD)	1	KT2-250-SOM
1C	PM 5/8" Tube 1/2" NPT Tubing Connector	3	BKF-108	PM	Part & Maintenance Kit (500 PPD)	1	KT7-500-SOM
2	#10-24 x 1" Top Cap screw (Monel)	4	#10-24 x 1"				
3A	Top Cap (for SP-100 and SP-200)	1	SM-106-250				
3B	Top Cap (for SP-500)	1	SM-106-500				
4	PM O-Ring	1	OH-VIT-023				
5	Spring Pin Guide	1	SM-104				
6	Spring (Hastelloy)	1	YM-103-HC				
7	Spring Guide Pin	1	SM-105				
8	Toggle Assembly	1	SM-Assembly				
9	* Spring Pivot	1	SM-103				
10	PM * O-Ring	2	OH-VIT-203				
11	* Valve Plug	1	SM-100				
12	* Pivot Arm	1	SM-102				
13	* Hinge Pin	2	SM-101				
14	Center Body	1	SM-108				
15	Mounting Bracket	1	SM-109				
16	Mounting Bolt (Zinc-plated)	2	1/4-20 x 1/2"				
17	Diaphragm Bolt	2	SM-110				
18	PM Rolling Diaphragm	2	SM-112				
19	Diaphragm Nut	2	SM-111				
20A	End Cap (for SP-100, SP-200)	2	SM-107-250				
20B	End Cap (for SP-500)	2	SM-107-500				
21	1/4-20 x 1 1/2" End Cap screw (Monel)	8	1/4-20 x 1 1/2"				
*	Items 9, 10, 11, 12, and 13 are sold pre-assembled as the Toggle Assembly (Item 8), "SM-Assembly"						

XXX =	100
	250
	500




BILL OF MATERIALS
Dwg. No. SP-XXX, BOM

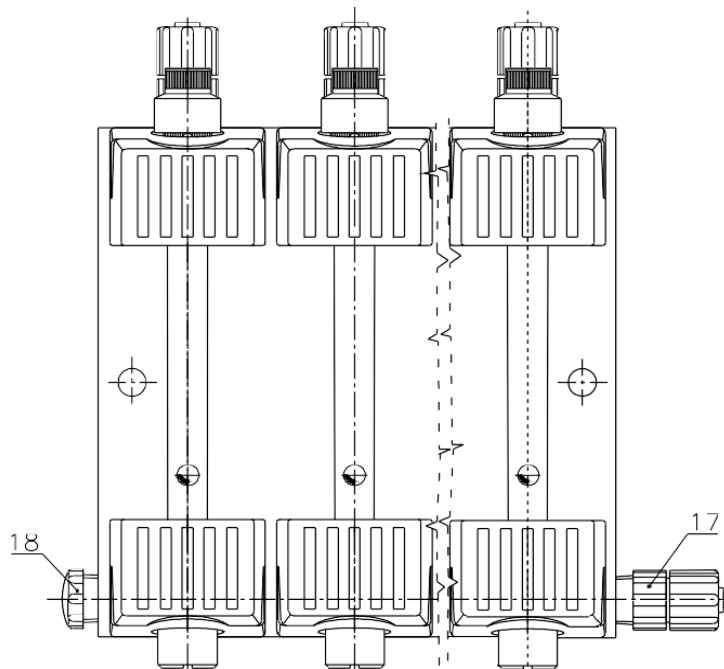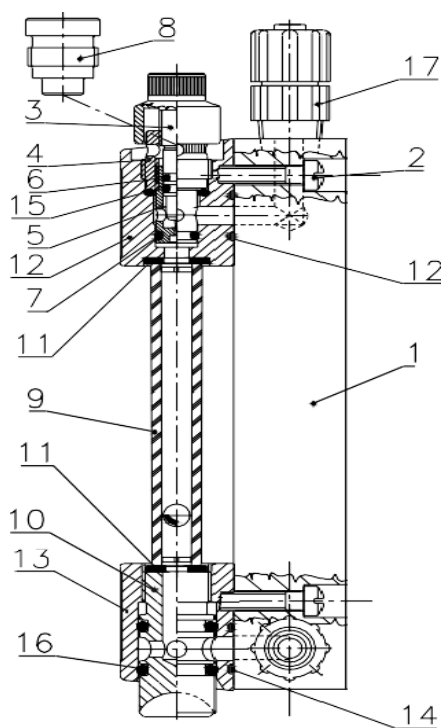

Item#	Part #	Description	Item#	Part #	Description
1	U-248-X	Measuring panel X= number of flowmeters	10	U-140	Measuring inlet
2	N-126	Screw	11	*G-100-3 # G-100-4	Sealing
3	AX-287-3	Mounted valve pin	12	M-110	Flowmeter holder upper
4	X-285	Valve holder	13	M-166	Flowmeter holder lower
5	X-286-3	Valve	14	OV-11-012	O-ring
6	OV-11-006	O-ring	15	OV-11-110	O-ring
7	OV-11-010	O-ring	16	OV-11-112	O-ring
8	M-175	Threaded closing screw	17	F-100	Mounted pipe joint
9	*A-108-8 # A-108-9	Measuring tube			
Notes:					
* FOR 2 kg/h					
# FOR 5 kg/h					
** not illustrated on the drawing					

ENCHLOR

EXPLODED VIEW
100 PPD REMOTE METER Dwg. No. MPE-(100-250)-CL2

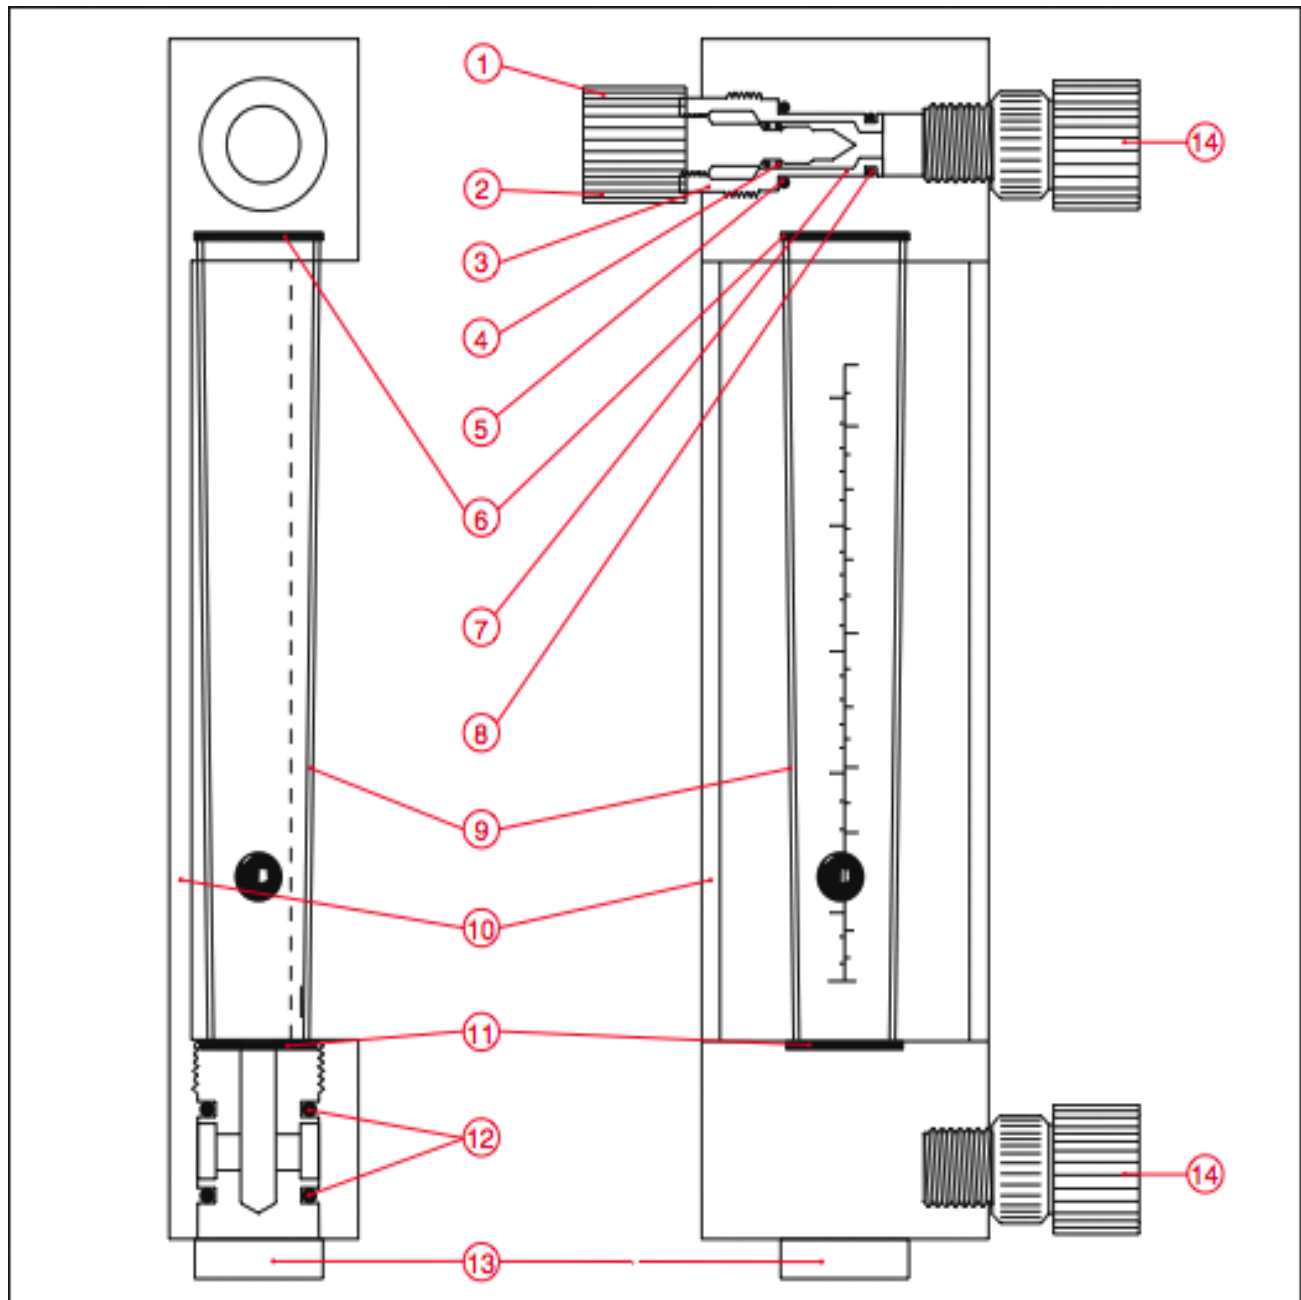

Item No	Description	Qty	Part No	Item NO	Description	Qty	Part No
1	Rate valve assembly,500 ppd	1	RVE-118-500	10	Meter Panel Body	1	MPE-259-500
2	Rate valve Plug ,500 ppd	1	RVE-651-500	11	Bottom Meter Gasket	1	GAE-VIT-115
3	Rate valve Bonnet ,500 ppd	1	RVE-224-500	12	O-RING	1	ORE-VIT-212
4	O-RING	1	ORE-VIT-010	13	Meter Inlet	1	MIE-232-500
5	O-RING	1	ORE-VIT-112	14	5/8 " Tubing Connector	2	TCE-110-500
6	Top Meter Gasket	1	GAE-VIT-116	EXPLODED VIEW, BILL OF MATERIALS 500 PPD REMOTE METER MPE -500-CL2, EXP 			
7	Rate valve Sleeve ,500 ppd	1	RVE-116-500				
8	O-RING	1	ORE-VIT-012				
9	Meter Tube , 500 ppd	1	MTE-129-500				

Technical Data

Model Information Code

Model E2



Gas

- C - Chlorine**
- S - Sulfur Dioxide**
- A - Ammonia**
- CO2 - Carbon Dioxide**

Vacuum Regulator Mounting

- 1 - Direct cylinder or manifold mounted with rate valve**
- 2 - Ton mounted with rate valve**
- 3 - Direct cylinder or manifold mounted with remote mounted meter panel with rate valve**
- 4 - Ton mounted with remote meter**
- 5 - Two direct cylinder or manifold mounted vacuum regulators, automatic switchover module, and remote mounted meter panel with rate valve**
- 6 - Ton mounted with auto-switchover**

Available Gas Rotometers

- 1 - 0.6 ppd (12g/h)**
- 2 - 1.5 ppd (28g/h)**
- 3 - 4 ppd (75 g/h)**
- 4 - 10 ppd (200 g/h)**
- 5 - 25 ppd (0.5 kg/h)**
- 6 - 50 ppd (1.0 kg/h)**
- 7 - 100 ppd (2.0 kg/h)**
- 8 - 250 ppd (5.0 kg/h)**
- 9 - 500 ppd (10.0 kg/h)**


Maximum Capacity

- 1 - 100ppd**
- 2 - 250ppd**
- 5 - 500ppd**

Ejector Connections Capacity


Connectio	
100ppd	Nozzle 1" hose - 3/4" NPT combination Diffuser 1" hose - 3/4" NPT combination <i>available with #12,13,15 or 16 nozzle</i>
250ppd	Nozzle 1" hose - 3/4" NPT combination Diffuser 1" hose - 3/4" NPT combination <i>above available in #14 nozzle only</i>
250/500ppd	Nozzle 1-1/4" NPT Throat 1-1/4" NPT

HOW TO CHOOSE LEAD GASKETS?

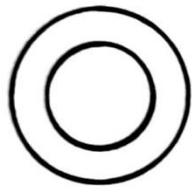


G-120

s = 1,5 mm

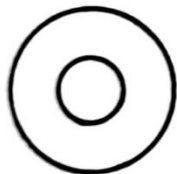

x-238

s = 3 mm

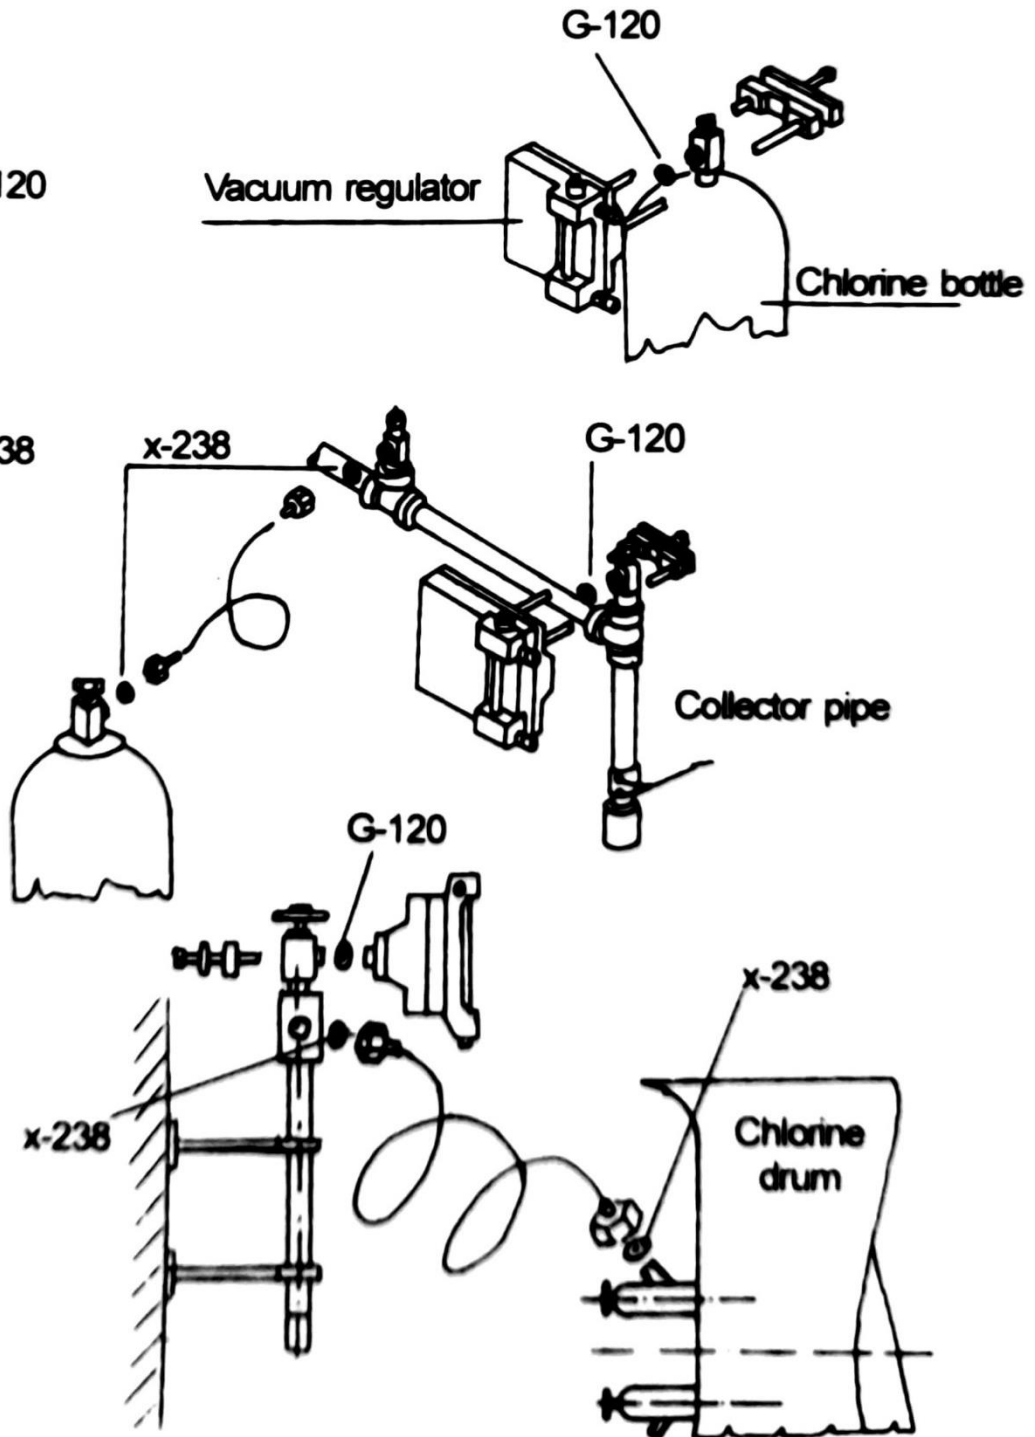

HOW TO CHANGE CHLORINE CYLINDER?




The chlorine bottle is empty, if the floating ball in the rotameter do not signalize the flow, and the loss of flow" indicator shows RED color. Please perform the changing procedure according to the following sketch!

1. Close the cylinder valve.
2. Make sure that the rotameter ball do not signalize any flow, and the loss of flow indicator window is showing RED color
3. Stop the injector by turning off the booster pump, and closing the ball valves
4. String the Yoke fixing screw and disconnect the Vacuum regulator from the cylinder valve
5. Change the chlorine bottle
6. Remove the old lead gasket, clean the contacting surfaces of the vacuum regulator and the cylinder valve
7. Insert a new lead gasket into the yoke and put the vacuum regulator back onto the full cylinder, don't tighten the yoke fixing screw too much!
8. Open the cylinder valve a little, than close it! The accidental leakage can be detected this way without further consequences, by the help ammonia soaked wool
9. If there is a leakage, eliminate it! (Repeat the process from No. 7)
10. If there is no leakage, than open the cylinder valve with max. % turn
11. Start the injector by turning on the booster pump and opening the ball valves

NOTE:

A. For detailed instructions please refer to the User Manual booklet

B. In case of a cylinder valve fault, please inform the company, responsible for charging the chlorine cylinder

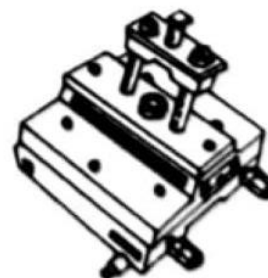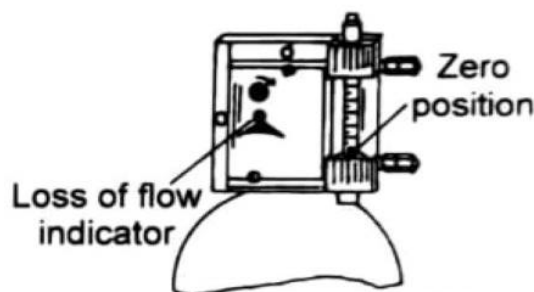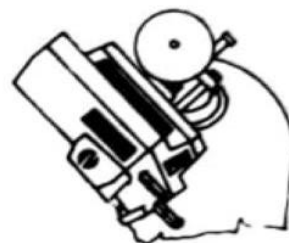



ENCHLOR INCS
130 West Main Street
PO BOX 99
Silverdale, PA 18962
USA
Web: www.enchlor.com
Email: sales@enchlor.com



The manufacturing took place in Egypt under the manufacturing contract between us and the Water Technology Company in Egypt, through which it is requested

236 EMTEDAD RAMSES 2 ST, CAIRO, EGYPT

TEL, FAX : 02-208 101 64

MO : 01279997874 - 01279997878

WATERTECHNOLOGY@YAHOO.COM

WWW.WATER-TECHNOLOGY-EGY.COM